


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHIIA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. USE FOUR ULTIMATE CLIPS VERTICALLY ALONG EACH PANEL EDGE WITH FOUR FASTENERS EACH. SPACE CLIP FASTENERS EVERY 6'-1/2".
3. FACE FASTENERS TO BE PLACED 12"-16" O.C. VERTICALLY ALONG THE EDGES OF TERMINAL PANELS. WHEREVER POSSIBLE, ENSURE FACE FASTENERS PENETRATE FRAMING MEMBERS.
4. REFER TO THE 10' VERTICAL PANEL INSTALLATION GUIDE FOR FRAMING AND SHEATHING REQUIREMENTS AND OPTIONS.

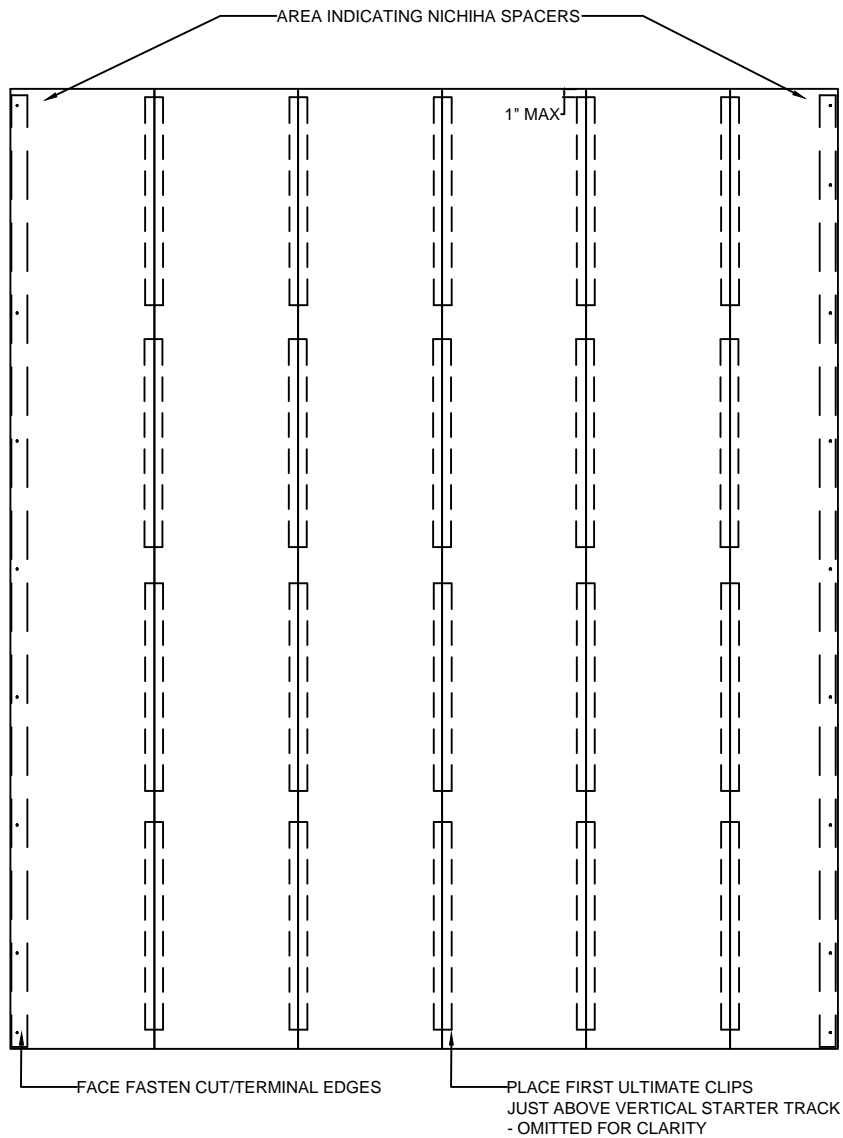

10MM - 10' VERTICAL PANEL FASTENER/CLIP CONFIGURATION

SCALE: 1/2" = 1'-0"